

Pi

3973, 3974, 3982, 3986

24" Square LED Pendant

30" Square LED Pendant

30" Round LED
Ring Pendant

30" Square LED
Ring Pendant

IMPORTANT

- **Always disconnect the power before installing or replacing Luminaires and before cleaning or other maintenance.**
- **Consult a qualified, licensed electrician to ensure correct branch circuit conductor.**
- ***Consulter un électricien qualifié pour vous assurer que les conducteurs de la dérivation sont adéquats.***

Product Information and Warnings


- Please read all included assembly instructions and warnings carefully before installation. Contact Customer Service if you have any questions or concerns. Before installation, please confirm that the fixture is compatible with your supply voltage and dimming system, if present.
- LEDs are highly sensitive electronic device do not open any factory sealed compartments, and avoid touching the LEDs with your hands or any object.
- Although all our fixtures are equipped with protective devices, LED electronic systems are vulnerable to power surges and supply variations. Do not install LED fixtures on the same circuit as any motors, appliances, or HVAC systems.
- Do not remove or bypass any LED Driver or Transformer that is provided with the fixture, and do not replace or substitute with another power supply.
- Fixtures must be wired in parallel on independent leads; do not "daisy chain" multiple fixtures together or wire them in series.
- All factory-made splices and connections must remain intact. LED circuits are carefully designed and built, and improper connections may damage the fixture.
- The ends of coaxial pendant cords have been precisely stripped and split at the factory and must not be field cut. Excess cord or cable should be neatly coiled and reserved in the fixture canopy.
- Any mounting hardware is provided for your convenience and should be used with discretion. Always use the appropriate hardware for the mounting surface.

Assembly Instructions


Instructions D'Installation

SONNEMAN
A WAY OF LIGHT

1. Shut off power to the outlet box. (A)
 2. Attach the ceiling pan (B) to the outlet box (A), secure with outlet box screws (C). Use the slots and wood screws (D) to secure the ceiling pan into the ceiling joists.
- CAUTION: Fixture must be supported independent of outlet box. Customer is responsible for ensuring appropriate ceiling construction to support the weight of the fixture.**

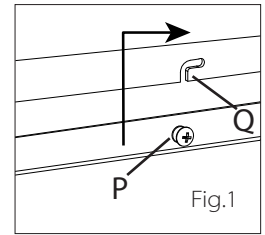


3. Screw the safety cable couplings (E) to the short studs on the ceiling pan (B).
4. Determine the height at which the fixture is to be hung. Use the slotted screw driver (F) to loosen the set screw (G). Adjust the power cord (H) to the desired length. Tighten the set screw to set.
5. Adjust the steel cables (J) to the desired length. To shorten the cable, push the cable up and it will be locked automatically. To lengthen the cable, lift up on the cable and push up on the lock (K). While keeping the lock depressed, lower the cable to the desired length. Release the lock to set.
6. Reserve extra power cord (H) and steel cables (J) in the canopy (L).
7. Make appropriate electrical connections using wire nuts:
 - a. Connect the LED driver's (M) live wire to the live outlet box wire.
 - b. Connect the LED driver's (M) neutral wire to the neutral outlet box wire.
 - c. Connect fixture's ground wire (green or uncoated) to the ground outlet box wire. If no ground is present in outlet box, connect fixture's ground wire to the mounting plate using the green screw (included).
 - d. If not using the 0-10V dimming function, cap off the purple and grey dimming wires.
 - e. Carefully place connections and LED driver (M) in canopy (L).

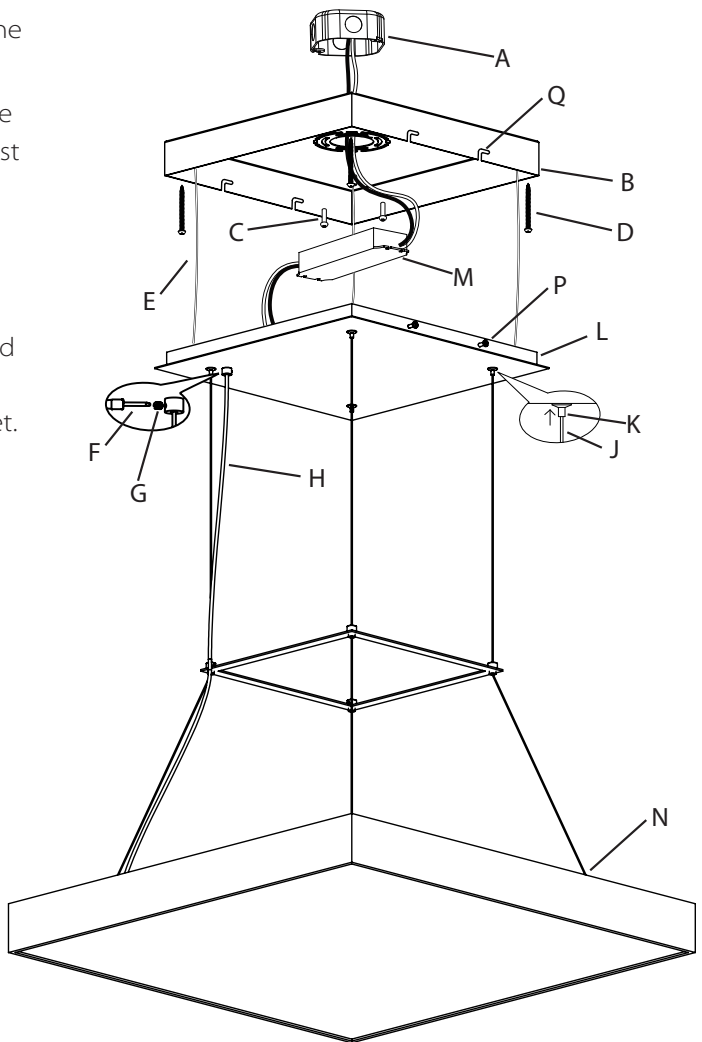


3973


8. Install the fixture (N) to the ceiling pan (B) by inserting the posts (P) into the key holes (Q) on the canopy, then slide/rotate to lock (Fig.1). The LED driver can be placed below the mounting plate. Secure by tightening the screws.
9. Restore power to the fixture.

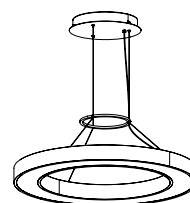

3982

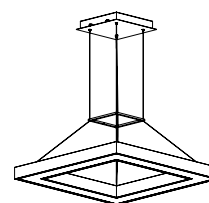

3983

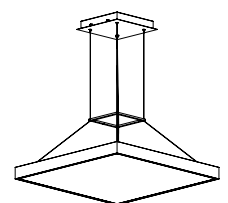

3974

Note:

- **Fixtures are dimmable with ELV (Trailing-Edge), Incandescent (Leading-Edge), and 0-10V type dimmers.**


Care Instructions:

Use a clean, dry cloth when dusting.
To protect the finish, avoid any harsh abrasives or chemicals.

Coax Splicing

FAILURE TO FOLLOW THESE INSTRUCTIONS WILL VOID THE WARRANTY

Coaxial Power Cord:

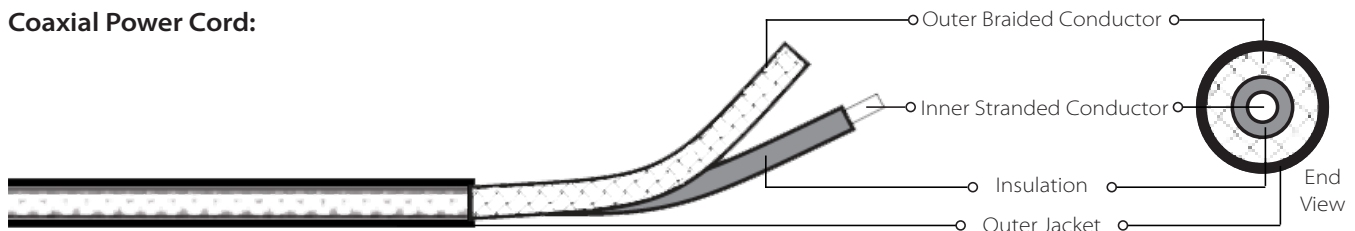

If field-cutting is required,
please follow these instructions:

1. Make a 1" slice along the length of the cord's outer jacket (Fig. 1).
CAUTION: Do not cut through the outer braided conductor.
2. Carefully strip the outer jacket of the cord and keep the outer braided conductors intact (Fig. 1).
3. Slide the outer braided conductor back to create a bulge and reveal the inner stranded conductor (Fig. 2).
4. Bend the cord to create an opening through the bunched-up portion of outer braided conductor, then pull out the inner stranded conductor (Fig. 3)
5. Twist together the outer braided conductor to form the negative wire of the fixture, then strip 5/8" off the end of the inner stranded conductor to form the positive wire of the fixture (Fig. 4).
6. Re-splice all power cords.

